


Safari Pod

Tank Bag

**Andy
Strapz**
andystrapz.com



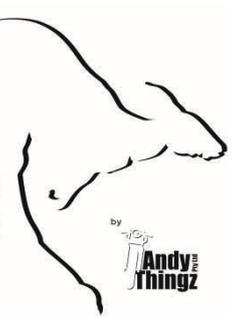


Use these instructions as a guide, not all bikes will be exactly the same but the principles will get you setup and on the road in no time.

Start by taking off the seat and fuel cap, slip the harness over the fuel filler neck and **immediately** replace the fuel cap. (fig A, B, C)



Attach the front strap around the steering head, ensure free movement of steering and don't risk damage to wiring and cables. (fig. D and E)

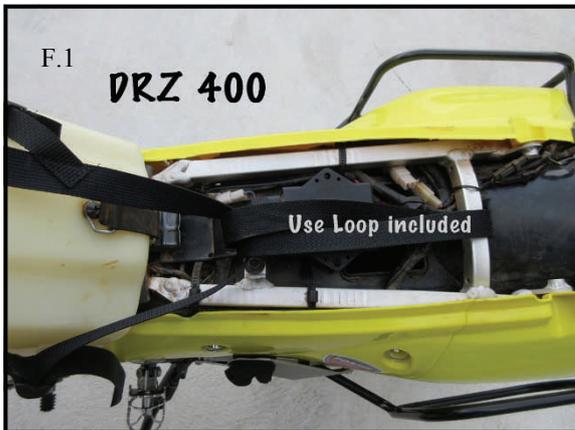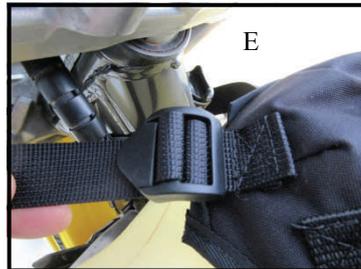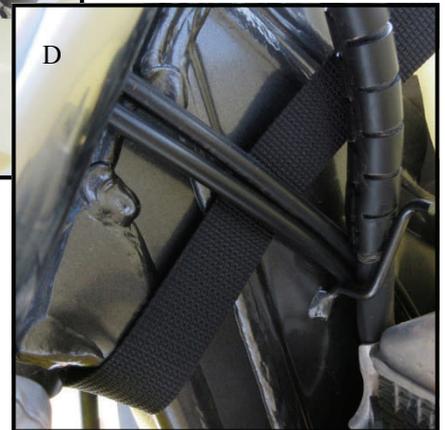

Now comes the challenging part.

Get the rear straps of the harness secure under the seat around the subframe. (fig. F.1 and F.2)

Here are two ways to approach it.

Replace the seat and at the same time make sure the straps sit flat and allow the locating lugs of the seat to fit correctly. Make sure that the straps are not going to be cut by sharp edges. (fig. G.1 and G.2)



Mount the bag and off you ride into the sunset. Naturally take as much care as you can not to spill fuel over the harness. It is fuel resistant but a bit of extra care won't hurt.



**Check the system after
20km and 100km then daily**

Ride well and enjoy

Contact us: +61 (3) 9786 3445 or info@andystrapz.com



The fine print bit - sorry, it's the modern world.

As Andy Thingz or a member of their staff can't fit this product for you, you take responsibility for the consequences that occur as a result of fitting it to your bike. Damage to your bike, the products or your person are totally your risk. By undertaking the task of fitting the Safari Pod tank bag system to your bike you indicate that you accept these disclaimers and its conditions. Should you not accept these conditions, stop and remove it, pack it up and return it in new condition for a refund.